

T/C-88 Pinion Shaft Bearing Installation / Removal Tool

Fig.-1

To install pinion bearing, place support ring raised lip end, into case as shown in fig. 1

Support ring is engraved with the words *Install on one end & Remove* on the other end.

Flip engine case & support over and place in suitable press.

Slide bearing over driver, and place driver with bearing into engine case bore. Driver & bearing will locate off of support ring bore.

Press bearing into case, until bearing bottoms out against support ring.


Bearing will be located at its required depth, and the two retaining rings may now be installed.



To remove pinion bearing, place support ring with engraved "Remove" side towards case

Place driver into bearing, and press out.

Fig.-2

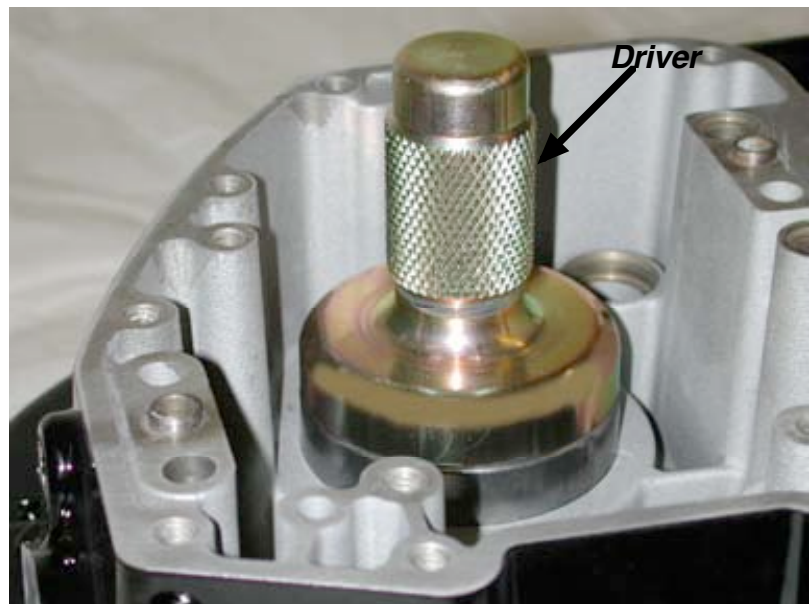

**Any Problems
call
603-668-6315**