




World's Finest Products For Harley-Davidsons

## Dresser Chassis Stabilizer CCI# 668100 & 668101

Install Dogbone to frame crossmember \*Use loctite on screws\*

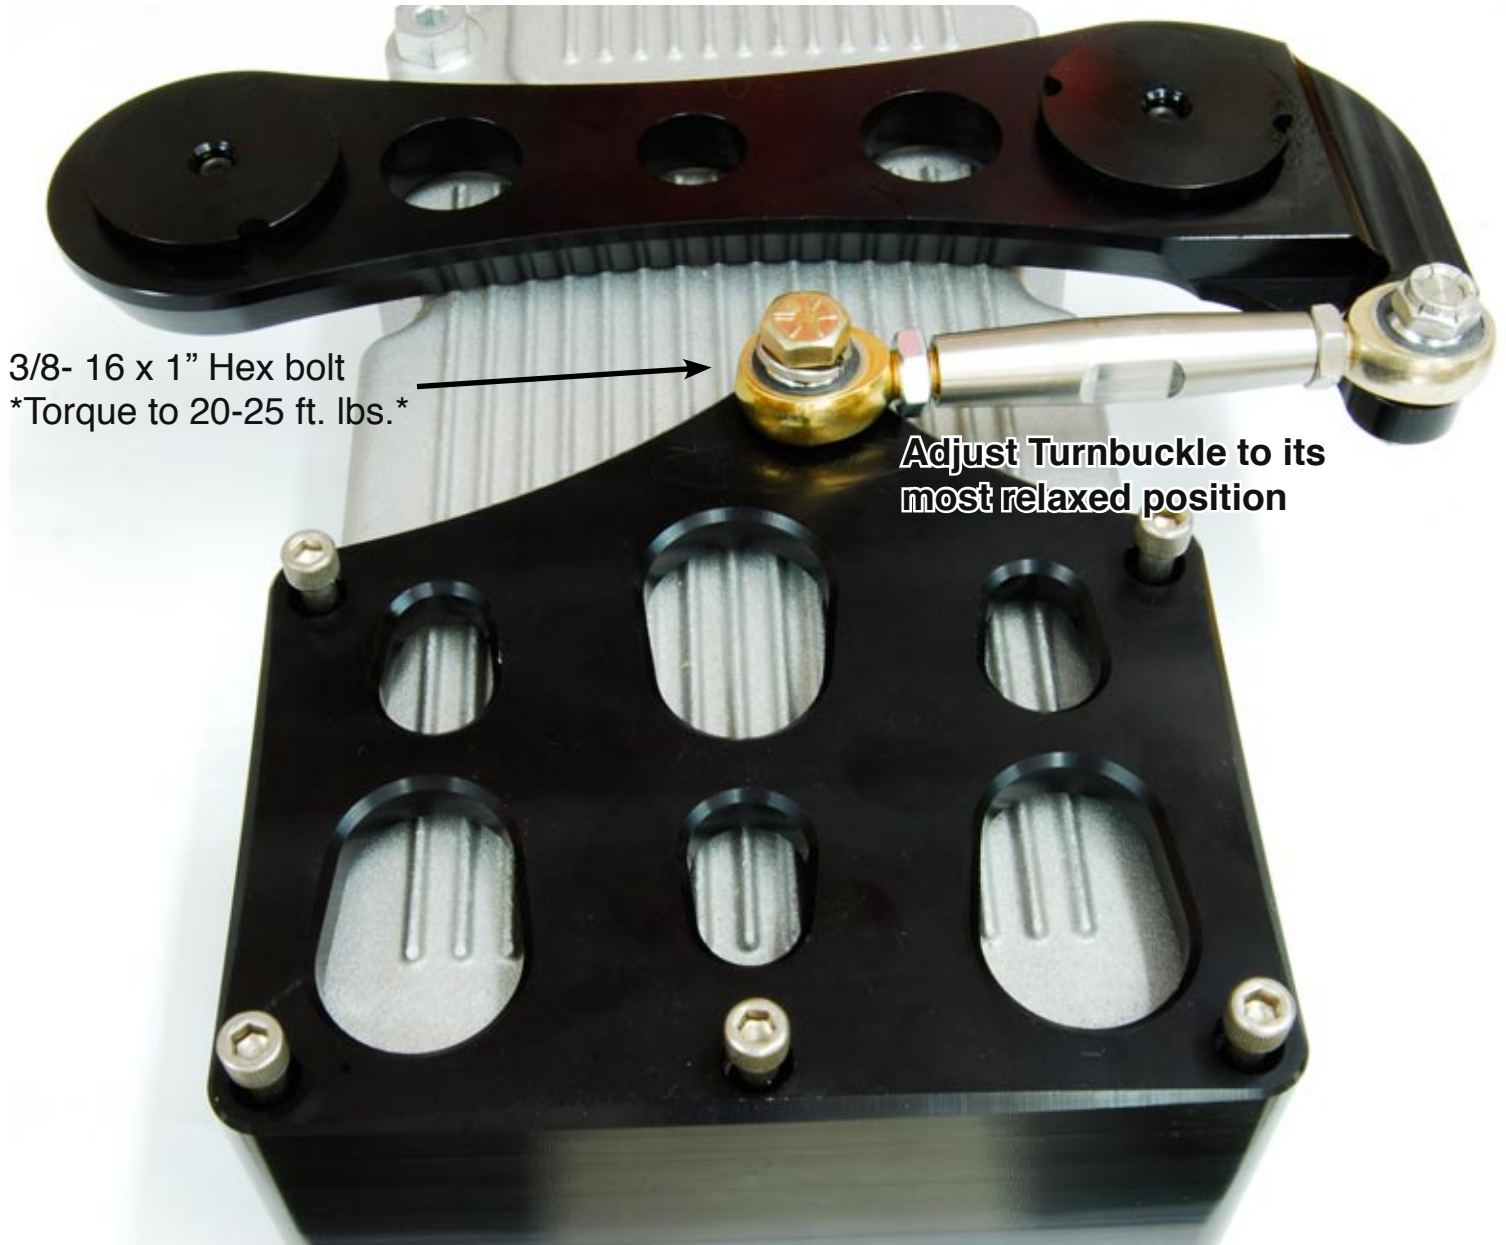

3/8- 16 x 1" Hex bolt  
\*Torque to 20-25 ft. lbs.\*

Adjust Turnbuckle to its  
most relaxed position

Install stabilizer box to oil pan using 1/4-20 x 3 1/2 bolts(5) included in this kit.  
\*Blue loctite & torque to 7-9 ft. lbs.\*

**Motorway Engineering**  
85 Hancock St.  
Manchester, NH 03101  
[www.motorwaycycle.com](http://www.motorwaycycle.com)